


**App Store**

**FIND THE APP STORE**

# SEARCH FOR THE VODXS ORION APP.

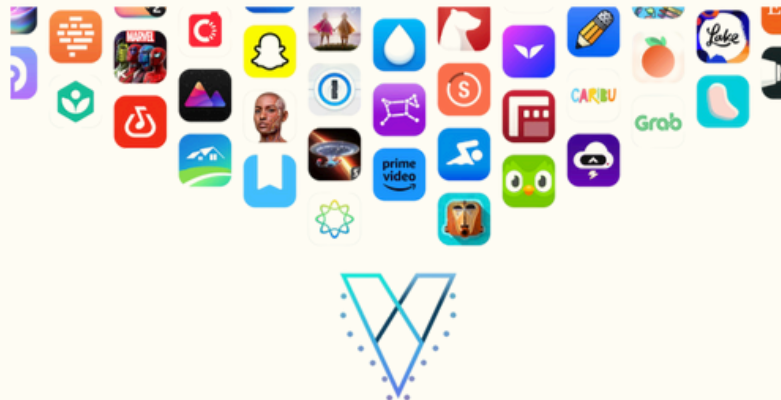

To install the Vodxs Orion app, search for it in your device's app store and install it.

## DEVICE REGISTRATION

- FIND THE APP STORE

On your Apple device, open the App Store.


- SEARCH FOR THE APP

Look for Vodxs Orion or use this link:

<https://apps.apple.com/us/app/vodxs-orion/id6743488147>

- DOWNLOAD & OPEN THE APP


Install the app and open it to begin setup.

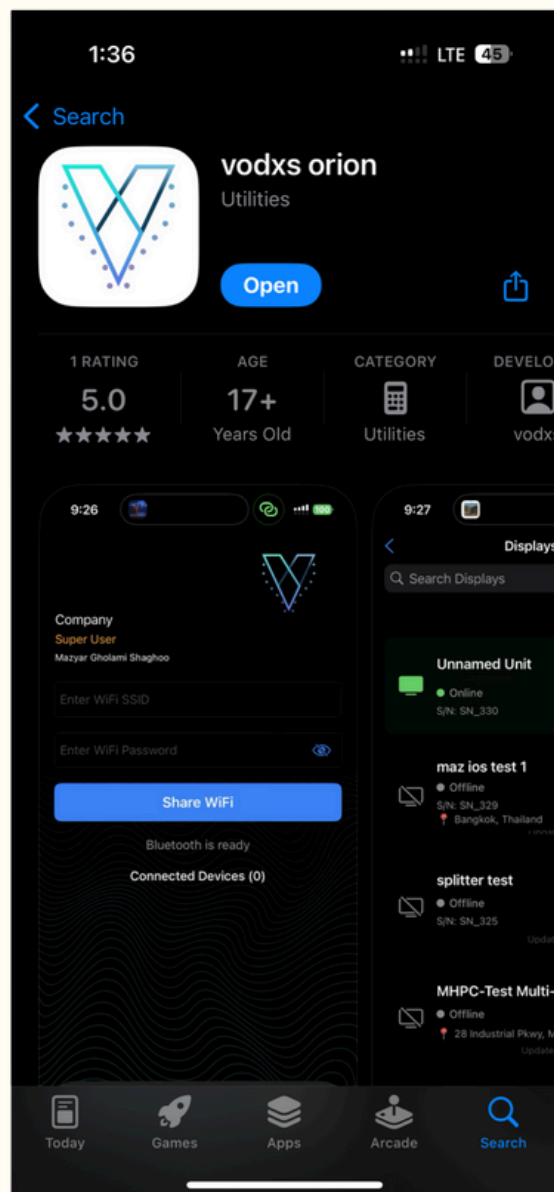

**PIN: Set up your new app-specific PIN code.**


**CREATE A 4 DIGIT PIN TO SET UP YOUR APP PIN**

- Enter your new 4-digit code
- Re-enter to confirm
- Remember - this PIN only works for this app

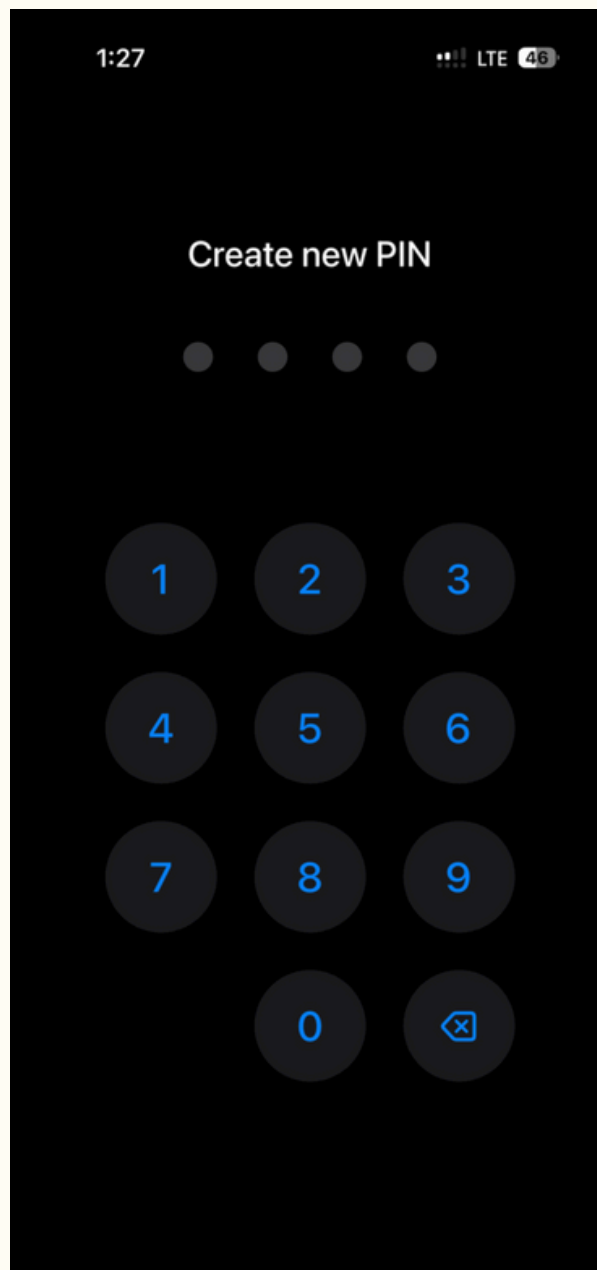

## PAIRING

- 1.Operation requires close physical proximity to the VODXS faucet. Please approach the device before continuing.
- 2.A pop-up will appear requesting pairing permission. Tap 'Accept' or 'Pair' to authorize the connection with your VODXS unit.
- 3.Your device list has been updated. You may now see and manage all connected VODXS units.

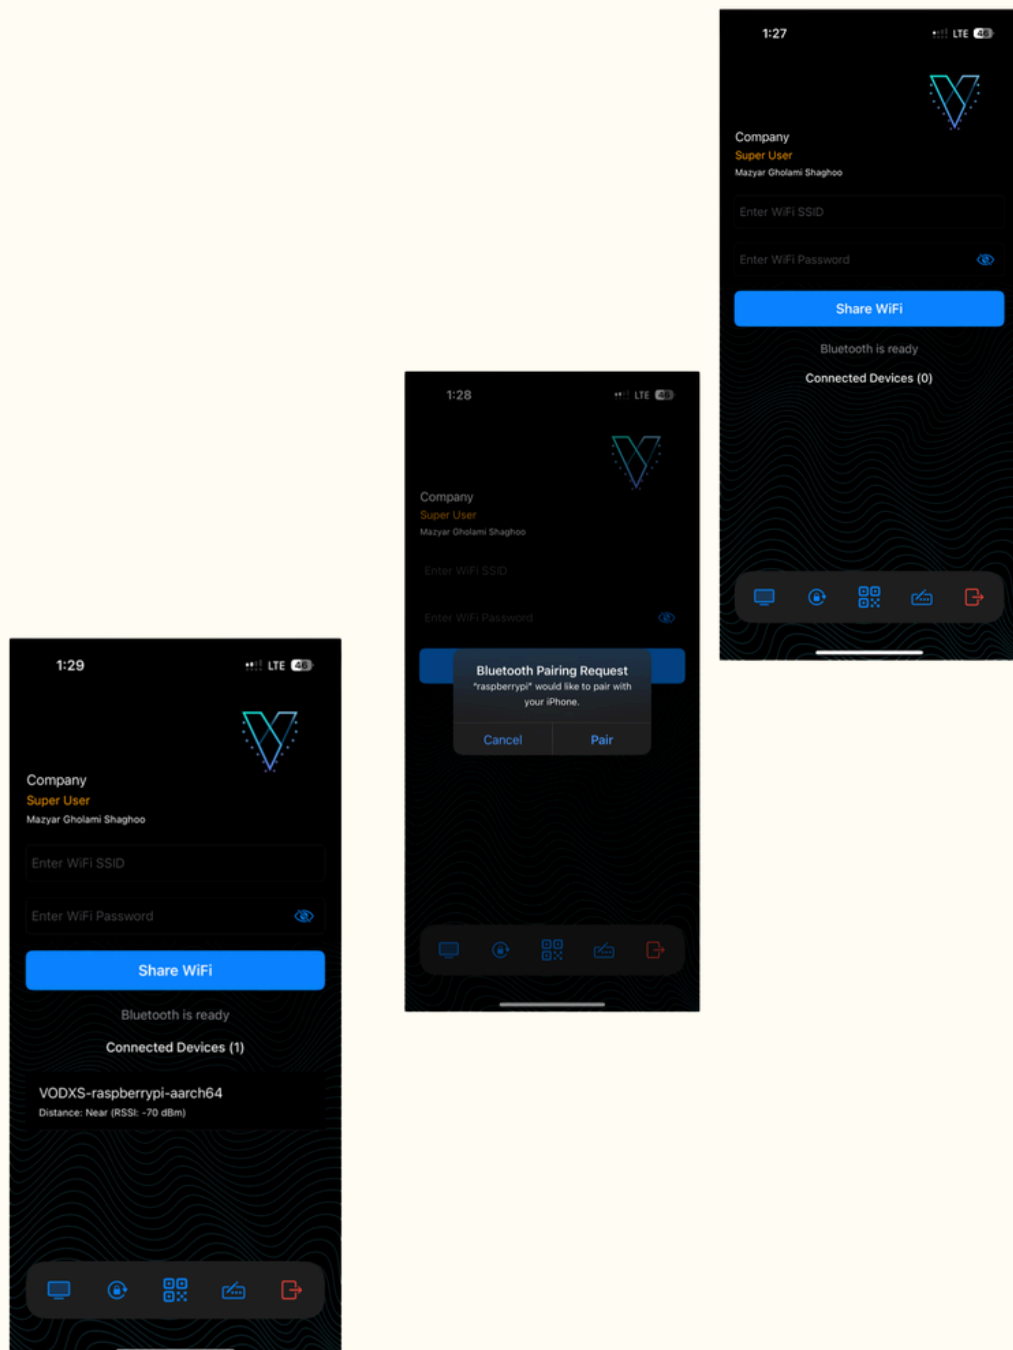

## AUTHENTICATION – CONNECT TO YOUR WIRELESS NETWORK

To complete the setup, your Vivva device must be connected to a WiFi network.

### Steps:

- **Enter your network name (SSID)**

In the first field, type the name of your wireless network.

- **Enter your WiFi password**

Input the correct password for the selected WiFi network.

- **Tap ‘Share WiFi’**

This will begin the authentication and pairing process.

- **Wait for confirmation**

The unit will process your credentials. During this time, monitor the screen. Once a QR code appears, your device is connected.

- **Access the CMS**

After setup, close the app. To manage your unit, log in to the CMS (Control Management System) using your registered credentials.

